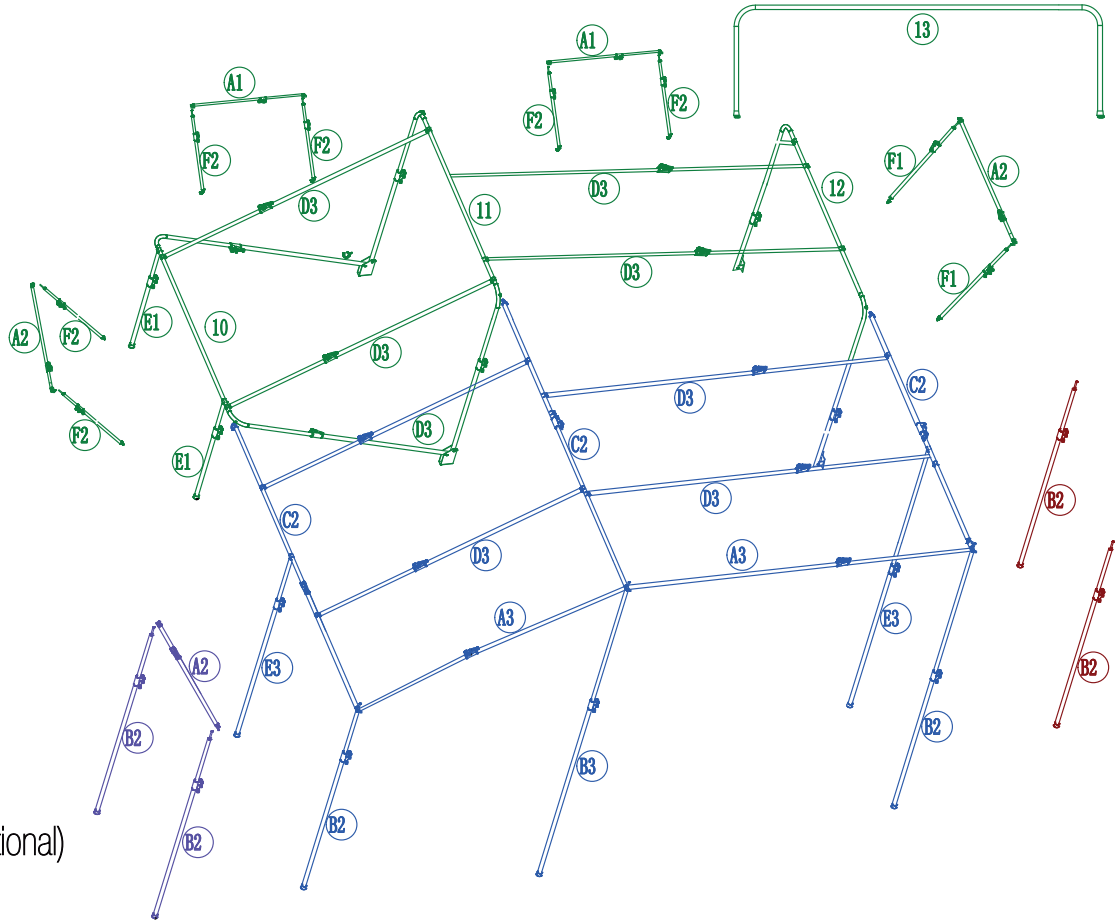





STIRLING Z TENT SETUP









- Main Tent
- Ensuite
- Kids Room (Optional)
- Annexe



Main Tent - Bow poles not shown

- NO# 13  x1
- NO# D3  x4 NO# E1  x2



Awning One

- NO# C2  x3 NO# B2  x2
- NO# E3  x2 NO# D3  x4
- NO# A3  x2
- NO# B3  x1



Ensuite

- NO# B2  x2 NO# A2  x1



Window Cover type 1 (makes 1)

- NO# F1  x2
- NO# A2  x1

Window Cover type 2 (makes 2)

- NO# F2  x4
- NO# A1  x2

Window Cover type 3 (makes 1)

- NO# F2  x2
- NO# A2  x1

Kids Room (Optional Extra)

- NO# B2  x2



PMX Hint

Prior to embarking on your first camping trip make sure you weather your canvas by wetting it down with a hose & letting it dry out atleast 2 times.

